

User Manual

Version 1.0 | Pastured Steps, LLC

1. Introduction

The **CRACK OF DAWN™** is a smart lighting solution designed to raise pullets and optimize egg production for layers. By utilizing a Real-Time Clock (RTC) and GPS coordinates, the system automatically calculates local sunrise and sunset times to provide the optimal amount of supplemental light for your flock.

2. Quick Start Guide

Follow these steps to initialize your controller.

2.1 Power & Connectivity

- 1. **Power Up:** Connect the controller to a DC power source.
 - Specification: A 12V supply is recommended, but the unit supports 5V 27V DC.
- 2. Connect to Wi-Fi: Open the Wi-Fi settings on your smartphone or device.
- 3. **Select Network:** Connect to the network named Crack-of-Dawn-XXXX (where XXXX is a unique code).
- 4. Enter Password: The default password is 12345678.

2.2 Accessing the Interface

- 1. Once connected, your device should automatically open the "Sign In" or "Log In" page.
- 2. If it does not automatically load, open a web browser and navigate to:
 - http://192.168.4.1 OR
 - o http://crackofdawn.local. (not available on all devices)

Note: Ensure you use http and NOT https.

Pro Tip: Once the page successfully loads, select "Add to Home Screen" in your browser menu to create a dedicated app icon on your phone.



2.3 Initial Configuration

- **Set Location:** Navigate to **Settings > Location**. Enter your Latitude and Longitude to ensure accurate sunrise/sunset calculations.
- **Set Date/Time:** Navigate to **Settings > Date/Time**. Verify the Date, Time, and Timezone are correct.

3. Dashboard Overview

The Home screen provides real-time system status.

System Status

- **LIGHTS ARE ON:** The system is currently illuminating the coop.
- **WARMING UP (XX%):** Lights are in the "Ramp Up" phase, simulating a gentle sunrise.
- LIGHTS ARE OFF: The system is idle.
- **SYSTEM DISABLED:** The mode is set to "Off" and the lights will not come on.

Visual Cycle Ring

This graphical ring displays a 24-hour cycle:

- Light Blue (Upper Arc): Daylight hours (Sunrise to Sunset).
- Dark Blue (Lower Arc): Night hours (Sunset to Sunrise).
- Yellow: Indicates when supplemental lights will run.
- Orange Marker: Indicates the current time of day.

Info Legend

- **Lights On:** Specific start/stop times for supplemental lighting.
- **Daylight:** Total hours of natural sunlight for the current day.
- Center Display: Total Light Duration (Natural + Supplemental) the hens will receive.



4. Operation Modes

Configure your preferred mode in **Settings > Light Settings**.

A. Fixed Mode (Layers)

Allows you to set a fixed amount of total light required.

• **Function:** You select a Total Light Duration from 8 to 16 hours. The system calculates your daylight for the day and determines the precise pre-dawn time to come on.

B. Pullet Mode (Growing Birds)

Designed for raising young birds according to scientific lighting schedules.

- Setup: Select Pullet Mode and enter the Hatch Date of your flock.
- **Function:** The system automatically adjusts daily light duration based on bird age.
- *Note:* Once pullets are older than 25 weeks (176 days), the system maintains the recommended 16 hours of total light.

C. Off Mode

• **Function:** Completely disables the lighting. The controller remains powered and accessible via Wi-Fi, but the lights will not come on.

5. System Configuration

Date & Time Settings

• **Timezone:** Select your Standard Timezone offset (e.g., UTC -6 for Central Time).

WARNING: Do not use Daylight Saving Time (DST) offsets. Always set the system to **Standard Time**. (In summer, subtract 1 hour from your local DST time.)

Location Settings

- Latitude/Longitude: Required for solar calculations.
- Accuracy: Coordinates can be found via Google Maps. (Right-Click or Long-press your location to see the coordinates.) Three decimal places are sufficient.

Network Settings



• **SSID:** You may rename the Wi-Fi broadcast name to distinguish between multiple controllers (chicken tractors). **Each SSID must be unique.**

6. Features & Maintenance

Test Mode

Located on the Configuration page, this function verifies wiring and bulb health.

- 1. Ramp Up: Lights fade from 0% to 100% over 30 seconds.
- 2. **Full On:** Lights remain at max brightness for 5 minutes.
- 3. Auto-Off: Once complete, the system returns to the schedule.

Lighting Log

Located in the menu, this displays a chart, one week at a time. Press the arrows to view previous weeks. The blue bars show daylight hours, while the yellow bars show supplemental lighting. The daily history of Lighting On/Off times and events is displayed below. You can delete the stored history by selecting **Clear Log** at the bottom of the list.

System Updates

Located on the "About" page. Please download the .bin files from our website (https://www.crackofdawnlighting.com/support) and use these to update your firmware.

- **Firmware:** Updates the controller's main operating code.
- User Interface: Updates the interface viewed on your mobile device.

7. Troubleshooting

Issue	Probable Cause	Solution
"Time Not Set" Warning	Power Loss. The device lost power and the internal battery is dead or missing.	Go to Settings > Date/Time and click "Save" to re-sync.



Lights On at Weird Times	Timezone or DST Settings	Ensure have the correct timezone selected and that you are not using Daylight Saving Time offsets in the Timezone settings.
System Disabled	Mode Selection	Check Settings > Light Mode and ensure it is not set to "Off".